



Installation Guide

MTCV - NL -Spare parts


1

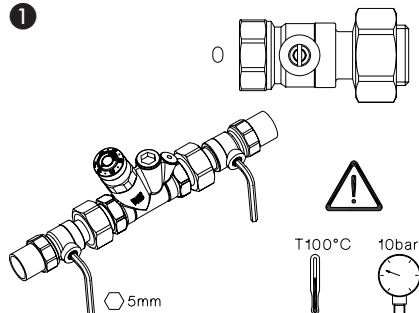


2

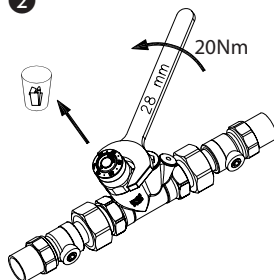


3

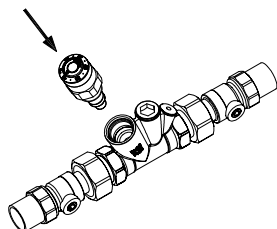


4

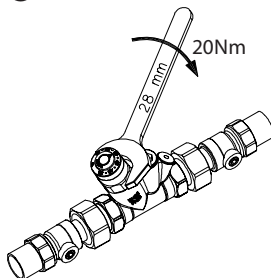


5

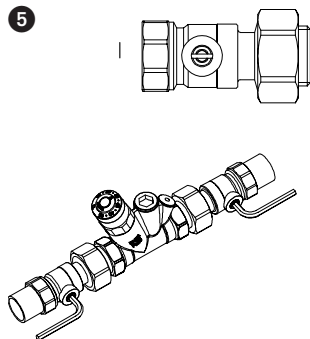


6

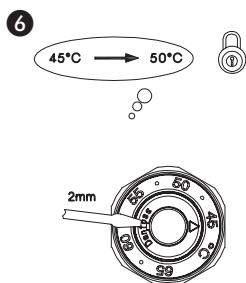

7

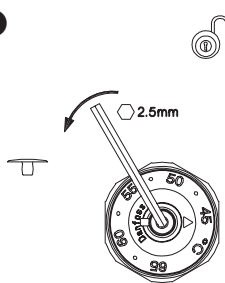

8

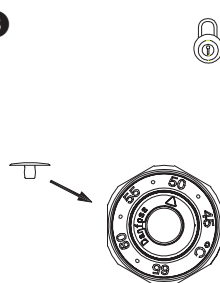

Installation Guide MTCV - NL -Spare parts
